


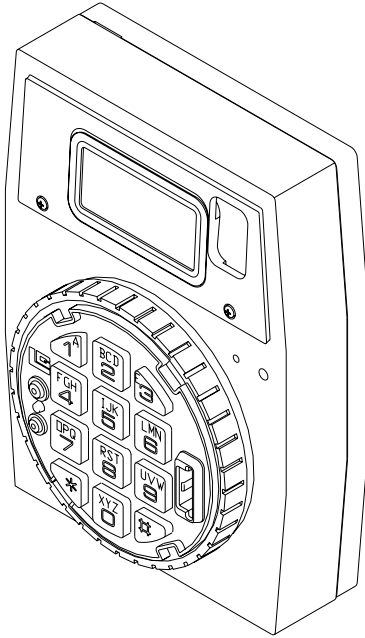

3045 Hand Held Programmer

USER OPERATING INSTRUCTIONS



FEATURES

FEATURES CODE

MANAGER CODE (Factory set to 1-2-3-4-5-6)

- Add/Remove Second User 0
- Enable/Disable Second User

TIME DELAY OVERRIDE

- Ability to add second combination to override delay period 1

DUAL CODE

- Two combinations required to open 2

SILENT SIGNAL ALARM (Optional Alarm Box Required)

- ... 3
- Duress signal if last number of code(s) is entered using one number higher or one number lower

DISABLE LOCK (Optional Alarm Box Required)

- 7
- Input signal disables opening of lock by valid code

TIME DELAY

- Delay period 1 - 99 minutes
- Open period 1 - 19 minutes

01:01

SET PROGRAMMER SWITCHES AND FEATURE TRANSMISSION

(See Switch Diagram on back page)

When adding features via the Hand Held Programmer, all features required must be added at the same time. Adding an additional feature later will re-program the lock to only that feature.

Manager Code

The lock is sent from the factory with the Manager code set to 1-2-3-4-5-6. If no other features will be added to the lock, the Manager can add a User on the keypad. If other features are added after the User has been set-up on the keypad (please see Manager Instructions for your lock), the User will be deleted and have to re-added after new set-up is complete.


Setting Switches

The COMBOGARD and SAFEGARD locks are set by turning switches ON or OFF via the Hand Held Programmer. Follow the steps below to set the lock to the features required.

- ① Turn switch(s) to the ON position to select features.
 - Only Silent Signal Alarm and Time Delay may be used with other features.
- ② Connect Programmer to the lock via the port marked ENT.
 - INITIAL SET-UP: Enter the factory pre-set Manager Code (1-2-3-4-5-6)
 - FIELD SET-UP: Enter the valid Manager Code

During the code entry display will show

- The top number shows the software version in the lock.
- The bottom number will change as each number in the code is entered.

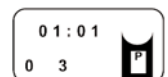

SAMPLE SET-UP - DUAL CODE

- ① Turn the #3 switch in the S3 switch block to the ON position.
- ② Connect Programmer to the lock via the port marked ENT.
 - INITIAL SET-UP: Enter the factory pre-set Manager Code (1-2-3-4-5-6)
 - FIELD SET-UP: Enter the valid Manager Code

During the code entry display will show

- The top number shows the software version in the lock.
 - The bottom number will change as each number in the code is entered.
- ③ Press and hold the 0 key to transmit the setting to the lock. Once the programming has been received by the lock, the display will show:

