

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid codes starts a 5-minute delay period.
 - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two more consecutive invalid codes will restart an additional 5-minute delay period.

During delay period, any keystroke will give three audio and visual signals.

BATTERY LOW WARNING

- Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt Alkaline Battery. LA GARD recommends the use of Duracell™ or Eveready™ Alkaline batteries. LA GARD recommends the replacement of batteries at least once annually.
- **If internal battery is depleted and will not allow lock to open, simply follow instructions below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.**


WARNING: The port for the eKEY^{II} is a data port only. Connecting power to this port will damage the system.

CHANGING YOUR BATTERY

- ① Remove black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on its handle.
- ② Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it drops out.
- ③ The connector is easily removed by unsnapping it from the two terminals on the top of the battery.

Never Pull on the Battery Leads

- ④ Connect a new 9-Volt Alkaline battery to the battery clip.
- ⑤ Gently push the battery and the leads completely up into the battery compartment.
- ⑥ Install the battery cover by placing one side of the cover in position first and then gently pressing the other side into place.

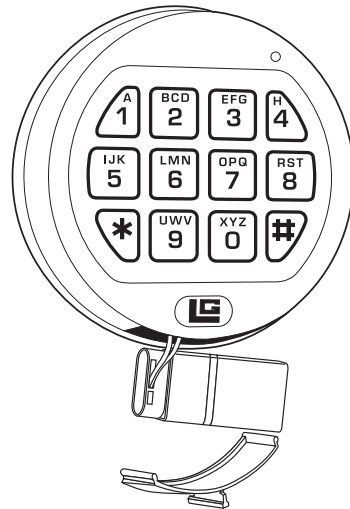

LPAUDIT

3750-K Electronic Entry Device

USER OPERATING INSTRUCTIONS

Please see Manager Instructions for additional features that may be activated on your unit.

FEATURES

USER CODE

- Open Lock
- Change Code

WRONG TRY PENALTY


- Four (4) consecutive invalid codes initiates five minute delay period.

LOW BATTERY WARNING

- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates battery low.

AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

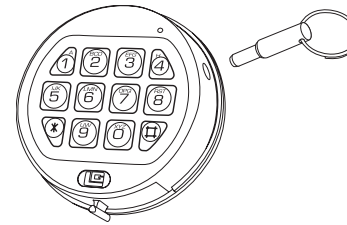

OPENING THE LOCK

- ① Enter valid six (6) digit code (insert eKEY^{II}, if set-up, then remove key).
 - ② The lock will indicate a valid code entry with a double signal.
 - ③ Within four (4) seconds open lock by either rotating the keypad to open position (Clock-wise) or turning the handle to the open position.
 - ④ Pull door open.
- **Invalid Code Entry** - Lock will signal three (3) times.

CHANGING YOUR CODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ① Enter existing code and hold down the last digit until unit double signals twice and the LED stays on. If eKEY^{II} is set-up, enter existing code, insert and leave in key until unit double signals and LED stays on.
 - ② Press the "0" key.
 - ③ Enter your NEW six (6) digit code two times (and insert eKEY^{II}, if set-up).
 - ④ If a mistake is made wait thirty (30) seconds and repeat steps ① - ③.
 - ⑤ Test lock operation several times before closing the door.
- **Valid Code Entry** - Double signal after valid six (6) digit code is entered.
 - **Invalid Code Entry** - Triple signal and old code is still valid.