
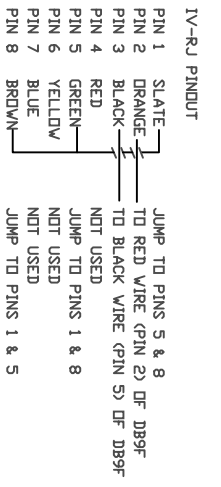
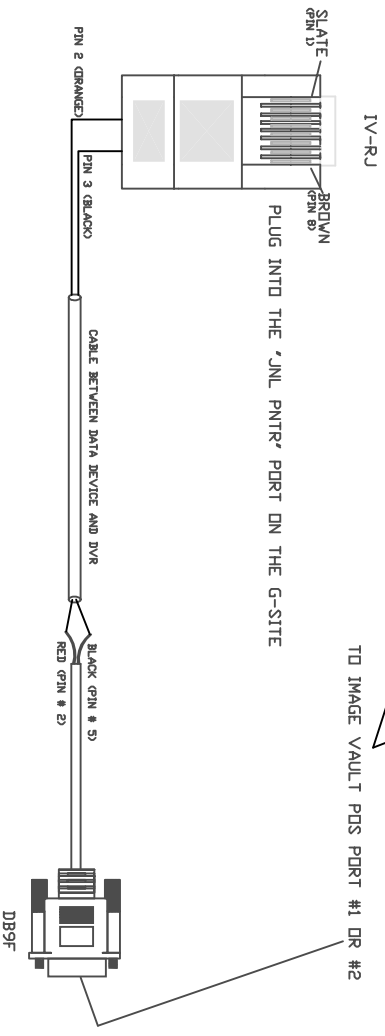


DIGITAL VIDEO RECORDER


- INSTALLATION NOTES:**
- * RUN A 18 AWG UTP CABLE FROM THE DATA DEVICE (CASH REGISTER) LOCATION TO THE IMAGE VAULT LOCATION. IF THE CABLE LENGTH IS GOING TO EXCEED 75' WE RECOMMEND CAT 5 CABLE.
 - * SPLICE THE WIRES IDENTIFIED IN THE DIAGRAM FROM THE IV-RJ TO THE CABLE THAT WAS RAN FROM THE DATA DEVICE. (CASH REGISTER) TO THE DVR. (SEE WIRING CONSIDERATIONS BELOW).
 - * FIND THE RJ45 PORT ON THE BACK OF THE GILBARCO G-SITE GPU THAT IS LABELED 'JNL PNTR' - PLUG THE IV-RJ INTO THAT PORT.
 - * SPLICE THE DB9F CONNECTOR PIGTAIL LEADS TO THE END OF THE CABLE THAT WAS RAN.
 - * ONCE ALL OF THE CONNECTIONS ARE MADE, THE DVR AND THE G-SITE STILL NEED TO BE CONFIGURED.

- *** DVR SETUP ***
- * LOGIN TO THE IMAGE VAULT USING THE SERVICE LEVEL PASSWORD.
- * GO TO THE 'STATUS' MENU, AND SELECT 'EDIT DATA STREAM SETUP'.
- * ENABLE THE PORT BY CHECKING THE BOX 'IS PORT IN USE?'
- * THEN ENABLE THE DEVICE, BY CHECKING THE BOX 'IS DEVICE IN USE?'. YOU CAN NAME THE DEVICE BY DOUBLE CLICKING IN THE WHITE AREA OF THE 'DEVICE NAME' FIELD.
- * SELECT THE DEVICE TYPE BY CLICKING IN THE WHITE AREA OF THE 'DEVICE TYPE' FIELD.
- *** NOTE: FOR GILBARCO-VERIFY THE SETTINGS WERE CHANGED TO: 9600-7-EVEN-1 ***
- * ASSIGN A PARTICULAR CAMERA TO THE PORT.
- * IF YOU HAVE 2 DATA DEVICES - PORT #2 NEEDS TO BE CONFIGURED ALSO. IN THE UPPER LEFT HAND CORNER THERE IS A DROP DOWN LIST THAT ALLOWS YOU TO SELECT EITHER PORT #1 OR PORT #2.
- * AFTER ALL OF THE ABOVE IS COMPLETED - REBOOT THE DVR.

- *** GILBARCO SETUP ***
- * GET THE STORE MANAGER TO ASSIST YOU WITH THE FOLLOWING STEPS.
- * PRESS THE 'G' KEY TO ENTER PROGRAMMING.
- * SELECT CONFIGURATION MENU.
- * YOU WILL BE PROMPTED FOR A PASSWORD - TYPICALLY IT IS 12345.
- * PRESS THE 'CASH' KEY.
- * SELECT 'DEVICE SELECTION' OPTION.
- * USE THE '#' KEY TO TOGGLE TO 'JOURNAL PRINTER'.
- * USE THE 'SUSPEND' KEY TO SELECT 'CITIZEN'S PRINTER'.
- * USE THE '*' KEY TO TOGGLE TO 'BAUD RATE'.
- * USE THE 'SUSPEND' KEY TO SELECT '9600 BAUD'.
- * PRESS THE 'SUB' KEY SEVERAL TIMES TO EXIT OUT OF PROGRAMMING MODE.
- * AFTER ALL OF THE ABOVE IS COMPLETED - REBOOT THE G-SITE GPU.

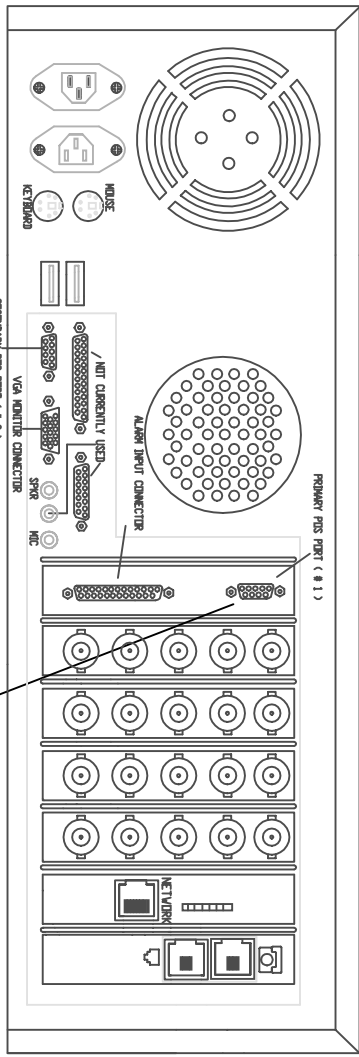

- *** WIRING CONSIDERATIONS: ***
- * ONLY 2 OF THE WIRES ON THE IV-RJ WILL BE USED AT ANY TIME.
 - * SHOWN ON THE LEFT, ARE THE NECESSARY CONNECTIONS TO BE MADE.
 - * WE HAVE FOUND THAT IN SOME SITUATIONS THAT A DIFFERENT WIRING CONFIGURATION IS NECESSARY.
 - * IF YOU HAVE CONFIGURED THE DVR AND THE G-SITE AS PER THE INSTRUCTIONS AND USED THE WIRING CONFIGURATION ON THE LEFT AND STILL ARE UNABLE TO CAPTURE DATA - TRY THE OPTIONAL WIRING CONFIGURATION SHOWN ON THE RIGHT.

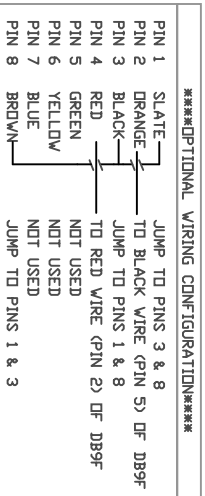

12/2000

© COPYRIGHT 2001

DESCRIPTION:

IV-G
GILBARCO G-SITE SERIAL INTERFACE
IVTECH@FIREKING.COM

IMAGE VAULT

TECHNICAL SERVICES

101 SECURITY PKWY.
NEW ALBANY, IN 47150
(888) 462-4382

REVISION	1.	2.	3.	4.	SCALE:	NTS			
ARCHITECT:	JCA								
DRAWN BY:	JCA								
CHECKED BY:	JCA								
DATE:	12/13/2001								
IV-G									